


Measuring Corners:

What am I trying to measure?

The easiest way to explain the measurement of the corner is to describe the corner measurement as “the straight measurement of the corner beginning from where the curve begins (See point A), to the outer boundary of the spa (See B)”

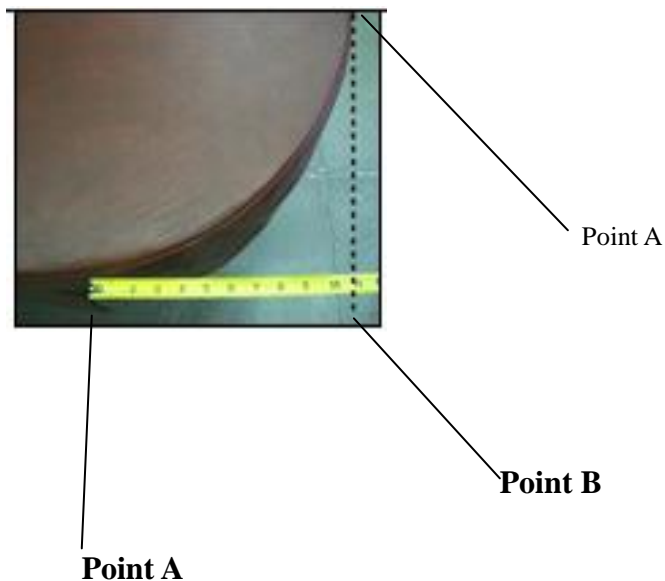

How Do I Measure?

The best way to measure is to use a tape measure and a “straight edge”

A straight edge could be a ruler, a piece of paper, or anything with a straight edge to it.

Step one:

Line the start of the tape measure at the point where the cover starts to curve (point A)

Step two:

Extend the tape to the end of the length of the cover (point B)

Step three:

To ensure accuracy, use a straight edge adjacent to the side you are measuring (see below).
Perform **both of the** A to B Measurements as indicated in the picture at the top of the page.



Step four:

Your measurement is complete! To confirm, use the same technique for another corner, they should measure the same eg 180mm and 180mm